


Rotary Switch Wiring Reference Sheet

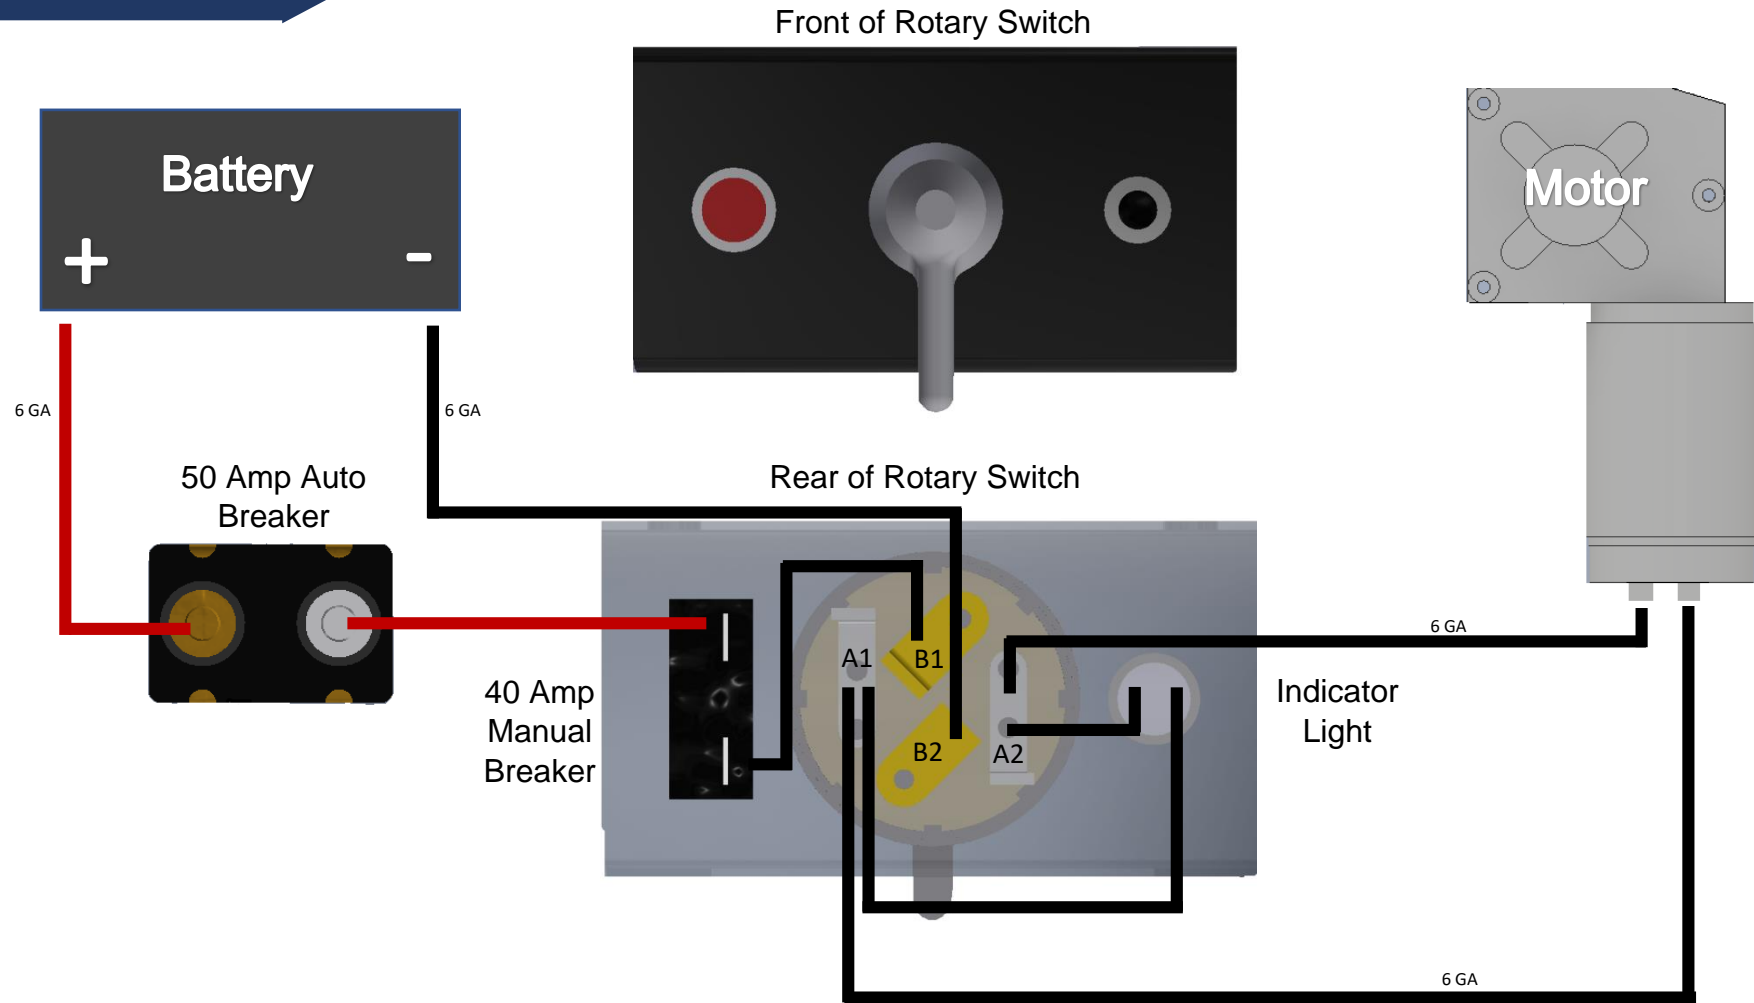

Wiring Directions	
A1	Indicator light, motor
A2	Indicator light, motor
B1	40 Amp Manual, 50 Amp Auto, to positive terminal
B2	Negative Terminal