

Spring Arm Trailer Tarp System- 16914

Need Help?

Call: 1-800-249-0297



Email: technicalsupport@ustarp.com

Tarp Out

To actuate the tarp out, crank the handle clockwise.


You will feel resistance until the clutch brake releases, this is normal.

Crank until the arms have rested on the rear of the trailer

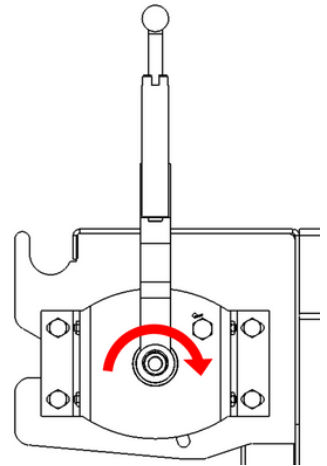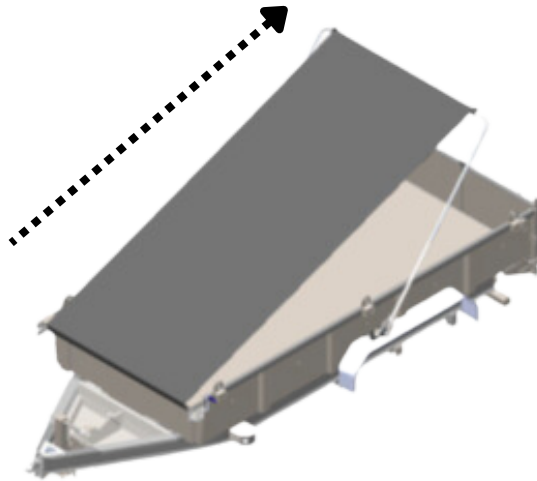

Engage The Safety Catch

After the arms have rested on the rear of the trailer, engage the safety latch by cranking one time, counter-clockwise

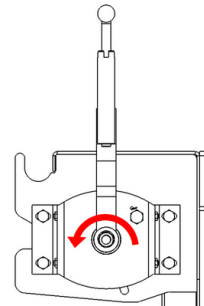

One Crank

Counter Clockwise

Tarp In

To actuate the tarp in, crank the handle counter clockwise.

You will hear the safety catch clicking as you crank, this is normal.

Crank until the arms have rested on the front of the trailer.

